

SuperTLink® Belting




Wedge

Wedge Cross Section

SUPERLINK BELTING	Wedge Cross Section	Nominal Width		Part Numbers				Minimum Pulley Ø		Ride Height Above Rim			
		inches	mm	5m	25'	100'	20m	inches	mm	Min(in.)	Max(in.)	Min(mm)	Max(mm)
SuperTLink	3V	3/8	10		0407025	0407100		2.80	71	0.18	0.40	4.6	10.0
SuperTLink	5V	5/8	17		0417025	0417100		5.50	140	0.06	0.20	1.4	5.1
SuperTLink	SPZ	3/8	10	L02Z5N			L02Z20N	2.80	71	0.18	0.40	4.6	10.0
SuperTLink	SPA	1/2	13	L02A5N			L02A20N	3.55	90	0.14	0.36	3.6	9.1
SuperTLink	SPB	5/8	17	L02B5			L02B20	5.50	140	0.06	0.20	1.4	5.1
SuperTLink	SPC	7/8	22	L02C5			L02C20	8.82	224	0.05	0.33	1.3	8.4
TLink Installation Tool	L02NT10	(10pk)											

Power Transmission - NuTLink®

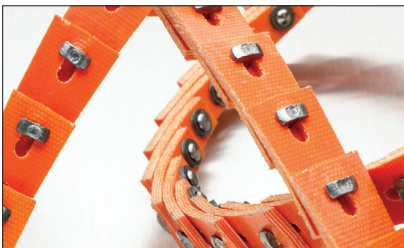

NuTLink® Belting



V

Classical Cross Section

NUTLINK BELTING	Classical Cross Section	Nominal Width		Part Numbers		Minimum Pulley Ø		Ride Height Above Rim			
		inches	mm	5m	20m	inches	mm	Min(in.)	Max(in.)	Min(mm)	Max(mm)
NuTLink	Z/10	3/8	10	L01Z5	L01Z20	1.78	45	0.06	0.18	1.6	4.6
NuTLink	A/13	1/2	13	L01A5	L01A20	3.00	80	0.08	0.31	2.0	7.8
NuTLink	B/17	5/8	17	L01B5	L01B20	5.00	125	0.09	0.37	2.2	9.3
NuTLink	C/22	7/8	22	L01C5	L01C20	9.00	229	0.00	0.23	0.1	5.8
TLink Installation Tool	L02NT10	(10pk)									